AIRCRAFT DISPATCHER

UNIT 7 – IAMS/CAHIS

STUDENT WORKBOOK

UNIT OBJECTIVES

- 1. Describe IAMS/CAHIS and its uses.
- 2. Identify IAMS/CAHIS users.
- 3. Obtain and update IAMS/CAHIS.

NOTES

I. IAMS/CAHIS

- A. Initial Attack Management System (IAMS)/Computer-Aided Hazard and Information System (CAHIS)
- B. IAMS/CAHIS decreases the workload of dispatchers in assessing aviation data.
- C. IAMS/CAHIS increases the speed and accuracy of obtaining aviation information, providing for increased safety and efficiency.

II. WHO SHOULD USE IAMS/CAHIS?

- A. Aviation Dispatchers
- B. Aviation Managers
- C. Federal Aviation Administration
- D. Military

III. WHERE DO I GET IAMS/CAHIS?

- http://www.nifc.blm.gov
- Click on "Aviation"

IV. HOW DO I DOWNLOAD/UPDATE IAMS/CAHIS?

- A. Select "Installation/Update of IAMS software and data."
- B. Select either "NIFC BLM" or US Forest Service" under the Install From the Web section.
- C. Select the "InstallShield Wizard" button to Install/Update.
- D. Click the "Next" button.
- E. Select "Install Now" then the "Install" button.
- F. Click the "Finish" button.

V. IAMS/CAHIS TOOLBARS

- A. Button Bar
 - 1. Zoom In

Allows the user to "zoom into" an area of interest within the view (geographic area) that is displayed on the screen

To zoom into a specific area provides a view with greater detail.

- Fixed Method
- Free Method

NOTE: The Zoom option can also be accessed through "Zoom" on the Menu Bar or Ctrl + Z.

2. Distance Tool

Allows the user to select a series of points within the view (geographic area) that is displayed on the screen; the distance between each point is shown, as well as the total distance.

NOTE: The Distance option can also be accessed through "*Tools*" on the Menu Bar or Ctrl + D.

3. Overlays

Allows the user to add, remove, and modify overlays

The overlays are the features to display, such as BLM district boundaries, rivers, interstates, etc.

NOTE: The Overlays option can also be accessed through "Select" on the Menu Bar or Ctrl + O.

4. Display Parameters

Allows the user to modify the display parameters for the selected overlays

The display parameters are the attributes of the overlay and determine how the selected overlay will appear to the user when drawn.

Includes the scale, symbol, line, color, fill, and label

NOTE: The Display Parameters option can also be accessed through "Select" on the Menu Bar or Ctrl + P.

5. Mark Point

Allows the user to select a point on the map/view display by using the mouse

NOTE: The Mark Point option can also be accessed through "Aviation" on the Menu Bar or Ctrl + M.

Only one point can be marked at a time.

B. Menu Bar

1. Settings Menu

Allows the user to set the startup and display options within IAMS/CAHIS

Short Help

Allows the user to turn the short help on or off

• Legend

Allows the user to turn the legend on or off

The legend lists the selected overlays and the associated color and/or symbol for each.

The legend may not be needed in the office but is useful if printed and posted.

The legend can be moved using the click and drag procedure.

• Scale Bar

Allows the user to turn the scale bar on or off

The scale bar shows the linear distance of the current view.

Include if you are printing a map.

The scale will change with the zoom feature.

Initial Map

Allows the user to identify the initial map; which is the map (or set of overlays) that will appear on the screen whenever the IAMS/CAHIS application is started

The last map saved is the map that will start up during the next IAMS/CAHIS launch.

• Initial View

Allows the user to identify the initial view; this is the view (or geographic area) that will appear on the screen whenever the IAMS/CAHIS application is started.

• Linear Units

Allows the user to select the measure of distance (either in kilometers, statute miles, or nautical miles) that will be displayed in the scale bar

Use nautical miles for aircraft dispatching.

Default Font

Allows the user to select the font that will be used for the text throughout the IAMS/CAHIS application, such as in text for the legend and scale bar

Screen Size

Allows the user to enter the width of their computer screen

2. Aviation Menu

Allows the user to select a point location on the map/view display and obtain aviation information from near that location

Mark Point

Same as that on the Button Bar

• Enter Point

Allows the user to select a point by entering coordinates of the location

When "Enter Point" is selected, the Convert Coordinates dialog box from the Tools Menu is displayed.

• Dispatch

Displays the dispatch information for the previously defined point

Hazards

Displays the hazard information for the previously defined point

• Settings

Allows the user to set the search distances that are used for the Dispatch and Hazards options

The distance default is set to 99 NM.

3. Tools Menu

Allows the user to obtain information about locations, as well s create a TFR

Distance

Same as that on the Button Bar

• Print Distance

Allows the user to print the Distance Results information from the previous session using the Distance tool

Enter/Edit TFR

Allows the user to create a new or edit an existing TFR

• Organization Entity (OE)

Allows the user to enter or edit information about the user's "organizational entity" or office

Airport/Airbase

Allows the user to display airport and airbase information

Aviation Boundaries

Displays a list of aviation boundary information

• Military Training Routes

Displays a list of MTR information

Navigation Aids

Displays a list of navigation aids information

• Special-Use Airspaces

Displays a list of SUA information

Convert Coordinates

Same as discussed when entering a point

4. Zoom

Allows the user to change the geographic area that is displayed (the view)

Zoom In

Allows the user to magnify an area of interest with the view

Recenter

Allows the user to center the view display on a new point—redraws the map

• Recenter Active

Allows the user to center the view display on the current "active point"

Map Scale

Allows the user to select a new scale for the view

Maximum

Allows the user to display the maximum area available to view—contiguous United States

History

Identifies the previous views that have been displayed within the current IAMS/CAHIS session

5. Select Menu

Allows the user to select the overlays, modify the display parameters, select the background color of the display, redraw the display, and reopen the current map

Overlays

Discussed previously under the Button Bar

• Display Parameters

Discussed previously under the Button Bar

Background

Allows the user to change the color of the background of the IAMS/CAHIS screen display

Redraw

Clears the screen and then redraws the current map on the screen

• Re-Open Current Map

Clears the screen and reopens the current map and draws it as if it was just defined.

6. Map Menu

Allows the user to create, open, save, or delete a map file (the set of overlays selected by the user), send the map or screen display to a printer, select the printer for printing the map or

text, see the information about the version of the software, or exit IAMS/CAHIS

New

Opens a new map and allows the user to select overlays to create a new map

• Open

Allows the user to open an existing map definition file, which is then displayed

• Save As

Allows the user to save the current map

Delete

Allows the user to delete a selected map definition file

• Print Map

Prints the displayed map/view, including the informational line at the bottom of the IAMS/CAHIS window

Print Screen

Prints the entire IAMS/CAHIS window

Select Map Printer

Sets the printing parameters that IAMS/CAHIS uses to print the map/view that is displayed

Select Text Printer

Sets the printing parameters that IAMS/CAHIS uses to print the text information that is displayed

About Maps

Displays version number, release date, and comments

• Exit

Closes the IAMS/CAHIS application and returns the user to the last accessed location in Windows

7. View Menu

Allows the user to create, open, save, or delete a view file (the geographic area that was selected by the user)

New

Opens a new view, the Maximum view, which displays the entire area of the contiguous lower 48 United States

Open

Allows the user to open an existing view definition file, which is then displayed

Save	As
	Save

Allows the user to save the current view

• Delete

Allows the user to delete a selected view definition file

VI. EXERCISES

- A. Exercise 1
- B. Exercise 2
- C. Exercise 3
- D. Exercise 4
- E. Exercise 5
- F. Exercise 6
- G. Exercise 7

An incomplete Aircraft Resource Order is provided for this exercise. As the ACDP, you have received the following request for aircraft: 2 Airtankers, 1 Lead plane, and 1 Air Attack.

- 1. Using the latitude and longitude from the Resource Order and IAMS/CAHIS, complete
 - Block 6
 - Block 11
 - Three VORs
 - Closest reload base
 - Other aircraft/hazards within 5 NM

2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.

3. Deconflict the airspace and create a TFR.

	RESOUR	RESOURCE ORDER		INITIAL DATE/TIME	2. INCIDENT/PROJECT NAME	/FROJECT	NAME	3. NO.	DENT /Pf	3. INCIDENT /PROJECT ORDER NUMBER	ORDER N	UMBER	4. OFF	4. OFFICE REFERENCE NUMBER	ERENCE 1	NUMBER
	AIR	AIRCRAFT	<u> </u>	7/13/00 1300	9	GOLDRUSH	H.C		Ź	NV-BMD-123)-123			r T Z	r47 123 N123	
1 47	5. DESCRIPTI	5. DESCRIPTIVE LOCATION/RESPONSE AREA 6.	RESPON	SE AREA	SEC.	TWN RNG	RNG Base MDM		IDENT BA	8. INCIDENT BASE/PHONE NUMBER	NE NUMB	ER	9. JUR	9. JURISDICTION/AGENCY BLM	N/AGENC	<u></u>
	Austin, NV	> Z		•	7. MAP REFERENCE	ERENCE			77.	775 555-1234	-1234		10. OR	10. ORDERING OFFICE CNC	OFFICE NC	
<u> </u>	11. AIRCRAF	11. AIRCRAFT INFORMATION			LAT.	39 38		LONG.		116	45			1		
	BEARING	DISTANCE	BASE	BASE OR OMNI	AIR CONTACT	CT FREQ	FREQUENCY	Ground Contact	-	FREQUENCY	\vdash	RELOAD BASE	Ш	OTHER AIRCRAFT/HAZARDS	CRAFT/H,	4ZARDS
					Goldrush A/A		123.456	Goldrush IC) l	170.00	8		+			
											ı		Τ			
Request Number	Ordered Date/Time	O ->	RES	JURCE RI	RESOURCE REQUESTED	Needed Date/Time	Deliver To	OF UNDER	Time ,	Agency	RESOUI	RESOURCE ASSIGNED	~ /	RELI TITA Date	RELEASED Date To	all the
A-1		~	AIR	R TANKER	ER	ĕ	FIRE									
														<u> </u>		
														<u> </u> -		
A-2		_	AR	R TANKER	ER	ĕ	FIRE									
A-3		_	LEA	AD PLANE	NE	₹	FIRE									
A-4		_	AIR	R ATTACK	S S	<u>A</u>	FIRE									
13. Req. No.	ORDER RELAYED Date Time	ELAYED e To/From	E		ACTION TAKEN	TAKEN		Reg. No.	Daf	ORDER RELAYED	YED To/From	L L		ACTION TAKEN	TAKEN	-
\top									\dagger			+				
								-	-			-				

- 1. Using the Township/Range/Section from the Resource Order and IAMS/CAHIS, complete
 - Block 11
 - Three VORs
 - Closest reload base
 - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

		INCOORINGE ORDERA	■ DATE/TIME									D47400E	140	
<u> </u>	AIR(AIRCRAFT	7/13/00	Re	Reveille			\geq	NV-BMD-125	125		F47 1235 N125	5. 70 0.	
ΙΔ.	DESCRIPTIVE LOCATI	VE LOCATION/R	5. DESCRIPTIVE LOCATION/RESPONSE AREA Reveille Range	6. SEC. TWN RNG 02 20N 46E 7. MAP REFERENCE	40.111	Base MDM M		DENT BA	8. INCIDENT BASE/PHONE NUMBER 775 555-1034	NUMBER .	9. JURISI 10. ORDE	9. JURISDICTION/AGENCY BLM 10. ORDERING OFFICE	GENCY	
	1. AIRCRAFT	11. AIRCRAFT INFORMATION		LAT.			LONG.	-		1		CNC		
	BEARING	DISTANCE	BASE OR OMNI AIR CONTACT FREQUENCY	AIR CONTACT	FREQU	ENCY	Ground Contact		FREQUENCY	SY RELOAD BASE		OTHER AIRCRAFT/HAZARDS	FT/HAZA	RDS
				Reveille A/A	123.456	456	Reveille IC	<u>0</u>	170.00					
Request Number	Ordered Date/Time	0 + >	RESOURCE REQUESTED		Needed Date/Time	Deliver To	tho!	Time	Agency RE	RESOURCE ASSIGNED	1 1	RELEASED To		augustus de la companya de la compan
A-1			AIR TANKER	ER.	⋖	FIRE								
A-2		~	AIR TANKER	ŒR.	⊴	FIRE								
A-3		~	LEAD PLANE	NE NE	⊴	FIRE					,			
A-4		~	AIR ATTACK	S X	⊴	FIRE								
_	- E			ACTION TAKEN	(EN		_	ORDE	ORDER RELAYED		A	ACTION TAKEN	(EN	
Ked. No.	Date	e lo/From	=				Req. No.	Date	Time	lo/From				

- 1. Using the VOR from the Resource Order and IAMS/CAHIS, complete
 - Block 6
 - Block 11
 - Closest reload base
 - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

		` ii); :)) ; :)) ; :	. DALE/IIME								٥	1000	
1	AIR	AIRCRAFT	7/13/00		ALKALI			O.R.	OR-DOF-345	45	T.	P6/1235 Q125	
5.	DESCRIPTI	VE LOCATION/R	5. DESCRIPTIVE LOCATION/RESPONSE AREA	6. SEC. TWN	RNG	Base MDM		ENT BAS	8. INCIDENT BASE/PHONE NUMBER	UMBER	9. JURISDICTION/AGENCY State	TION/AGENC	>
	ALKALI LAKE	LAKE		7. MAP REFERENCE	RENCE			619	619 555-2345	45	10. ORDERING OFFICE BIC	IG OFFICE BIC	
<u> </u>	1. AIRCRAFI	11. AIRCRAFT INFORMATION		LAT.			LONG.						
	BEARING	ICE	BASE OR OMNI AIR CONTACT FREQUENCY	AIR CONTACT	r FREQL	JENCY	Ground Contact		FREQUENCY	RELOAD BASE		OTHER AIRCRAFT/HAZARDS	ZARDS
	17	43	LKV	Alkali A/A	123.	123.456	Alkali IC		170.00				
12. Request Number	Ordered Date/Time	O ->	RESOURCE REQUESTED	'	Needed Date/Time	Deliver To	T (NOTA)	Time Aç	Agency RES	RESOURCE ASSIGNED	QU'III Q	RELEASED Date To	ALI THE
A-1			AIR TANKER	ŒR	⊴	FIRE							
A-2		~	AIR TANKER	ER	⊴	FIRE							
A-3		7	LEAD PLANE	NE	M	FIRE							
A-4		~	AIR ATTACK	NO.	⊴	FIRE							
_	<u> </u>			ACTION TAKEN	KEN		_	ORDE	ELAYED	į	ACTIC	ACTION TAKEN	
Ked. No.	Date	III0]H,0	=				Ked. No.	Date	lime	lo/From			
			-			1							

- 1. Using the latitude and longitude from the Resource Order and IAMS/CAHIS, complete
 - Block 6
 - Block 11
 - Three VORs
 - Closest reload base
 - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

A-2	SHINN MISON RNG AP REFERENCE AP REFERENCE CONTACT FREQUIND A/A 123 STED Needed STED Date/Time			A-PNF. ASE/PHONI 120 0 FREQUE 170.0 Agency ID	OAD BASE	P34321 D321 9. JURISDICTION/AGENCY FS 10. ORDERING OFFICE SIC	SDS
Shinn Mountain 11. AIRCRAFT INFORMATION BEARING DISTANCE BASE Number Ordered Confirme A-1 1 AIR A-2 1 LEA A-3 1 LEA	2C. TWN RNG AP REFERENCE 40 17 CONTACT FREQ Inn A/A 123 Inn A/A 123 STED Needed Date/Time			9 213-4 120 0 FREQUEI 170.0	OAD BASE	9. JURISDICTION/AGENCY FS 10. ORDERING OFFICE SIC	SOS
A-2 A-3 Thinn Mountain Shinn Mountain BEARING DISTANCE BASE Ordered A-3 The	AP REFERENCE 40 17 CONTACT FREQUING AND		Shinn IC	9 213-4 120 0 FREQUEI 170.0 Agency ID	RELOAD BASE	0. ORDERING OFFICE SIC	SDS
A-2 11. AIRCRAFT INFORMATION BEARING DISTANCE BASE BEARING DISTANCE BASE A-2 A-3 A-1 AIR A-3 A-1 AIR	40 17 CONTACT FREQUING AIR 123 STED Date/Time		Ground Contact Shinn IC Contact Shinn IC Contact Shinn IC	120 0 FREQUEI 170.0 Agency ID	RELOAD BASE		SOS
A-2 A-3 BEARING DISTANCE BASE Cordered Cool T A-1 A-1 A-2 A-3 A-3 A-1 A-BEARING DISTANCE BASE A-1 A-1 A-1 A-1 A-1 A-1 A-1 A-	CONTACT FREQUENT A/A 123. STED Date/Time		Shinn IC Shinn IC	170.0 Agency ID	RELOAD BASE		SOS
A-2 A-3 A-1 A-3 A-1 A-3 A-3 A-3 A-3	STED Nee	- Jo	Shinn (App.)	우		OTHER AIRCRAFT/HAZARDS	
A-2 A-3 A-3 A-3	STED -		40				
A-2 Ordered (40%) Q T Number Date/Time (40%) T A-1	STED -		40,				
1					RESOURCE ASSIGNED	RELEASED LETA Date To	ALI ALI
1 AIF		FIRE					
1 AIF							
1 AIF							
——————————————————————————————————————	4	FIRE					
——————————————————————————————————————							
- L							
	ΑI	FIRE					Ц
A-4 1 AIR ATTACK	₫	FIRE					
							Ц
ORDER RELAYED	ACTION TAKEN		_	ELAYED		ACTION TAKEN	
Req. No. Date Time To/From			Req. No. Date	Time To	To/From		

- 1. Using the Township/Range/Section from the Resource Order and IAMS/CAHIS, complete
 - Block 11
 - Three VORs
 - Closest reload base
 - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

		; ii); ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ;	- DALE/IIME									777	
<u> </u>	AIRC	AIRCRAFT	7/13/00	MILL CREEK	CREE	¥		CA	CA-LNF-0444	144	_	P54441 R441	
5. DE	ESCRIPTIV	/E LOCATION/F	5. DESCRIPTIVE LOCATION/RESPONSE AREA	6. SEC. TWN 26 28N	RNG 8E	Base MDM		DENT BA	8. INCIDENT BASE/PHONE NUMBER	JUMBER	9. JURISDICTION/AGENCY FS	TION/AGENC FS	ΣΥ
	IVIIII Creek, CA	ek, CA		1₩	ENCE			618	619 213-4567	299	10. ORDERING OFFICE LNF	NG OFFICE L NF	
11. /	AIRCRAFT	11. AIRCRAFT INFORMATION	7	LAT.			LONG.						
BE	BEARING	DISTANCE	BASE OR OMNI	AIR CONTACT FREQUENCY	FREQU	ENCY	Ground Contact		FREQUENCY	Y RELOAD BASE		OTHER AIRCRAFT/HAZARDS	AZARDS
				Mill Creek A/A	123.456	456	Mill Creek IC	5	170.00				
Request Number	Ordered Da te /Time	0 ->	RESOURCE REQUESTED	1 1	Needed Date/Time	Deliver To	thoth of the	Time A	Agency RE ID	RESOURCE ASSIGNED	OLIJ CE	RELEASED Date To	offit (
A-1			AIR TANKER	ŒR	⊴	FIRE							
A-2		~	AIR TANKER	ER R	⊴	FIRE							
A-3		_	LEAD PLANE	√NE	⊴	FIRE							
A-4		_	AIR ATTACK	S S	⊴	FIRE							
_	 			ACTION TAKEN	EN		_	ORDE	ORDER RELAYED		ACTI	ACTION TAKEN	
Keq. No. Date	e IIII	IO/From	E				Reg. No.	Date	Lime	To/From			

- 1. Using the VOR from the Resource Order and IAMS/CAHIS, complete
 - Block 6
 - Block 11
 - Closest reload base
 - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

	5	NESCONCE ONDEN	N DATE/TIME									044000	
MUN AE	T-T- AIR	AIRCRAFT	7/13/00	STILLWATER	WATI	X		Ņ	NV-CCD-0012)12		F4/222 K222	
	5. DESCRIPT	IVE LOCATION/R	SPONSE AREA	6. SEC. TWN	RNG	Base MDM		ENT BA	8. INCIDENT BASE/PHONE NUMBER	UMBER	9. JURISDIC	9. JURISDICTION/AGENCY BLM	ICY
	Stillwat	Stillwater Mountains	s	7. MAP REFERENCE	ENCE			775	775 861-6355	155	10. ORDERING OFFICE SFC	NG OFFICE SFC	
	11. AIRCRAF	11. AIRCRAFT INFORMATION		LAT.			LONG.						
	BEARING	ICE	BASE OR OMNI	AIR CONTACT FREQUENCY	FREQU	ENCY	Ground Contact		FREQUENCY	Y RELOAD BASE		OTHER AIRCRAFT/HAZARDS	1AZARDS
	111	29	TIC	Stillwater A/A	123.456	456	Stillwater IC	<u>0</u>	170.00				
12. Request Number	Ordered er Date/Time	0 + → Ox →	RESOURCE REQUESTED	'	Needed Date/Time	Deliver To	thotal of the	Time	Agency RE ID	RESOURCE ASSIGNED	CO TITO	RELEASED Date To	Time of
A-1			AIR TANKER	ŒR.	⊴	FIRE							
A-2		_	AIR TANKER	ŒR.	⊴	FIRE							
A-3		1	LEAD PLANE	ANE	IA	FIRE							
A-4		~	AIR ATTACK	NO.	⋖	FIRE							
13.	ORDE			ACTION TAKEN	KEN		_	ORDE	ORDER RELAYED		ACT	ACTION TAKEN	
Keq. No.	. Date TIME	ne lo/Hom	<u> </u>				Keg. No.	Date	IIIIe	lo/From			

- 1. Using the latitude and longitude from the Resource Order and IAMS/CAHIS, complete
 - Block 6
 - Block 11
 - Three VORs
 - Closest reload base
 - Other aircraft/hazards within 5 NM
- 2. Using IAMS/CAHIS, determine the closest force for each resource requested (default setting of 500 NM). Document the dispatch center of the closest resource in the TO/FROM box in Block 12.
- 3. Deconflict the airspace and create a TFR.

				_								1	
	AIRC	AIRCRAFT	7/13/00		LIVERMORE	뜻		CA	CA-SCU-0515	15		P56345 U345	
5. DE	ESCRIPTIN	VE LOCATION/F	5. DESCRIPTIVE LOCATION/RESPONSE AREA	6. SEC. TWN	RNG	Base MDM		ENT BAS	8. INCIDENT BASE/PHONE NUMBER		9. JURISDICTION/AGENCY State	State	ACY
	Livermore, CA	re, CA		7. MAP REFERENCE	SENCE T			707	707 615-5432	1	10. ORDERING OFFICE NO	NG OFFICE NO	
11. F	4IRCRAFT	11. AIRCRAFT INFORMATION	7	LAT.	37 40		LONG.		121 32	l			
BE	BEARING	DISTANCE	BASE OR OMNI	AIR CONTACT FREQUENCY	FREGL	JENCY	Ground Contact	_	FREQUENCY	RELOAD BASE		OTHER AIRCRAFT/HAZARDS	HAZARD
				Livermore A/A		123.456	Livermore IC	<u>0</u>	170.00				
				ī							,		
Request L	Ordered Date/Time	O ->	RESOURCE REQUESTED	' '	Needed Date/Time	Deliver To	HOLL	Time Aç	Agency RES	RESOURCE ASSIGNED	Cliffi	RELEAS Date	SED TIME To TITE
A-1			AIR TANKER	(ER	⊴	FIRE							
A-2			AIR TANKER	ŒR	⊴	FIRE							
A-3		1	LEAD PLANE	4NE	М	FIRE							
A-4			AIR ATTACK	Š Š	⊴	FIRE							
_	l 👸 –			ACTION TAKEN	KEN		_	ORDEF	ELAYED	Į.	ACT	ACTION TAKEN	
ned. No.							Ked. No.	Dale	ellile	IO/FIOIII			

NOTES